



# SKYFi™ Quick Guide




Radio to the power of X™

The SKYFi name, XM name, and related logos are trademarks of XM Satellite Radio Inc.


## Selecting Channels

There are six ways to select a channel using your SKYFi™ Receiver or Remote Control.


### Enter channel number directly

Press  on the receiver or remote until DIRECT appears in the top right corner of the screen. Enter channel number.




### Press channel preset

Press  on the receiver or remote until A or B appears at the top of the screen. Press the number key(s) for the desired preset.



### Turn the scroll wheel

Scroll through channels (fast or slow) with the SKYFi Receiver scroll wheel .






### Select from a list of channels

Press remote   keys to navigate through a list of channels. Hold key down for faster scanning. Press  to select.

### Move channel ahead or back

Press remote  or  key to tune in next or previous channel.\*



### Search by category

Press receiver or remote category search key  until desired category is displayed. Use receiver scroll wheel  or remote   keys to scroll through channels within a category. Press  to select.



\* When SKYFi is connected to the SKYFi Audio System, these buttons control the volume.

## Changing Display Screens

To switch to a large-type display that provides greater readability from across a room

When viewing the main play screen, press  to switch to a larger channel-number configuration. Press  again to continuously scroll a large artist name/song title.

To see what artists or songs are currently playing on multiple XM® channels

When channel or category lists are displayed on the screen, push  to show names of artists currently playing. Press  again to show titles of currently playing songs.

## Setting Presets

Up to 20 preset channels can be stored in the two memory “banks” of your SKYFi unit—10 in Preset A and 10 in Preset B. Here’s how:

**Step 1:** Tune in the channel you want to register as a preset.

**Step 2:** Press  until A or B appears at the top of the display.

**Step 3:** Press and hold a number key on the receiver or remote.

The channel-name line will reverse and audio will mute for 2 seconds to indicate the preset has registered.


## Previewing Favorite Channels




To display artists and songs currently playing on your favorite channels:

**Step 1:** Set your favorite channels as presets.



**Step 2:** Select a memory “bank” (Preset A or Preset B)

using  .

**Step 3:** Press  to switch between display modes for channel number, artist name, and song title.

**Step 4:** Use the scroll wheel  or the remote   keys to scroll through channels stored in Preset A or Preset B.

## Memory: Storing Artist/Song Title Information

Press  to store screen information for a song. Press and hold  to recall stored information. Up to 10 different artist names/song titles can be saved at once.



Warning: When using this product it is always important to keep your eyes on the road and your hands on the wheel. Not doing so could result in injury to you or to others or in property damage.

